


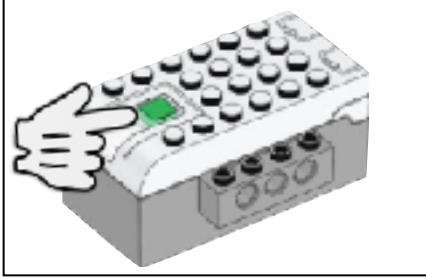



Pour démarrer




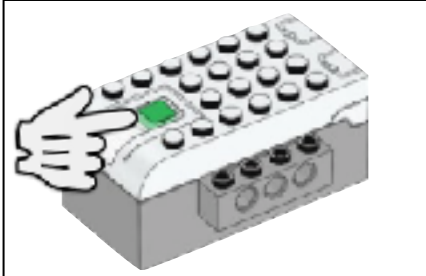


1	 A hand icon is pointing to a square icon that features the WeDo 2.0 robot and the text 'LEGO education'.	Ouvrir l'application
2	 A hand icon is pointing to a grid of programming blocks in the software interface.	Repérer la page de programmation.
3	 A hand icon is pointing to the touch screen on the top surface of the brick.	Toucher l'icône de la brique.
4	 A hand icon is pointing to a green square button on the side of the brick.	Appuyer sur le bouton de la brique.
5	 A hand icon is pointing to a notification window that says 'L'ajout' (The addition).	Associer la brique.

* S'assurer qu'il y a deux piles AA dans la brique intelligente et que le Bluetooth est activé (Réglages).

Pour fermer



1		Revenir à l'écran d'accueil.
2		Cliquer 2 fois sur le bouton central.
3		Faire glisser l'application vers le haut.
4		Appuyer sur le bouton de la brique pour l'éteindre.